

Wireless Presentation Adaptor

User's Manual

(Model Name: WP-920)

Version: 4.1
Date: Mar. 22, 2010

Table of Contents

1. Overview.....	4
2. Quick Start.....	6
3. Windows Client Utility.....	10
3.1 Starting Program.....	10
3.2 Login.....	10
3.3 Main User Interface.....	11
3.4 Screen Projection.....	11
3.5 Audio Projection.....	12
3.6 Video/Music streaming Feature.....	13
3.7 Menu Description.....	14
3.7.1 Show Login Code.....	14
3.7.2 Open Admin Web Page.....	15
3.7.3 Searching Server.....	15
3.7.4 Projection Quality.....	16
3.7.5 Projection Source.....	16
3.7.6 Send Audio to Display.....	17
3.7.7 Auto WiFi Connect.....	17
3.7.8 Auto Power Manager.....	18
3.7.9 Hide UI.....	18
3.7.10 Advanced Screen Capture.....	19
3.7.11 Repeat.....	20
3.7.12 Make wePresent Token.....	20
3.7.13 Copy Application to desktop.....	21
3.7.14 About.....	21
3.7.15 Exit.....	22
4. Windows Mobile Utility.....	23
4.1 Download from wePresent box.....	錯誤! 尚未定義書籤。
4.2 Using MobiShow with a Smartphone.....	23
5. Mac Client Utility.....	29
5.1 Launch Application.....	29
5.2 Main User Interface.....	30
5.3 Screen Projection.....	31
5.4 Video/Music streaming Feature.....	31
6. Web Management.....	33
6.1 Home Page.....	33
6.2 Download Software.....	33

<i>6.3</i>	<i>Conference Control.....</i>	<i>34</i>
<i>6.4</i>	<i>Login Web Admin</i>	<i>36</i>
<i>6.4.1</i>	<i>System Status.....</i>	<i>36</i>
<i>6.4.2</i>	<i>Network Setup.....</i>	<i>37</i>
<i>6.4.3</i>	<i>OSD Setup.....</i>	<i>39</i>
<i>6.4.4</i>	<i>Projection Setup.....</i>	<i>40</i>
<i>6.4.5</i>	<i>Change Passwords.....</i>	<i>41</i>
<i>6.4.6</i>	<i>Reset to Default.....</i>	<i>41</i>
<i>6.4.7</i>	<i>Firmware Upgrade.....</i>	<i>42</i>
<i>6.4.8</i>	<i>Reboot System.....</i>	<i>43</i>
<i>6.4.9</i>	<i>Logout.....</i>	<i>44</i>
<i>7.</i>	<i>Appendix</i>	<i>45</i>
	<i>Screen Image Background Maker</i>	<i>45</i>
	<i>Using PtG Converter.....</i>	<i>50</i>

1. Overview

wePresent is a must-have device for your meeting room! It turns your existing "wired" projector into a "high-end wireless" projector. With the revolutionary Plug-and-Show wireless projection features, wePresent makes every of your presentation and meeting efficient and successful.

- High Performance Wireless Projection & Audio Projection

With the revolutionary high performance wireless projection with audio, you can easily share the multimedia on the big monitor with friends without cable hassle.

- Plug & Show

With the accompanied Plug & Show USB Token, wireless presentation becomes easy! Just link your PC/Laptop to wePresent (through WLAN or Ethernet), plug the token into a USB port, and in seconds, your screen will be wireless projected to the connected projector!

- 4-to-1 Split Screen Projection

With this 4-to-1 split screen feature, up to four PC screens can be projected to one projector in the same time. Thus you can easily do side-by-side comparison from four PC / PDAs to increase meeting productivity!

- 1-to-4 Screen Projection

With 1-to-4 Screen Projection, you can projection PC content out to up to 4 screens at the same time through wePresent devices. 1-to-4 Screen Projection feature functions both under presentation mode and video mode.

- Macintosh(Mac) wireless Projection

wePresent supports Mac client connected and projected wirelessly. By launching the Mac client software that stored in accompanied USB token, wePresent provide the same experience to Mac user to utilize the wireless presentation feature.

■ HD video Streaming

wePresent supports video streaming feature, you can watch the HD video on big screen with original quality through wireless streaming.

■ SNMP Manager

wePresent equips the SNMP management feature to make the device management easier. By enabling the SNMP (Simple Network Management Protocol) protocol (Version 2c), the devices could be managed and configured through network for each or bunch.

■ Changeable Splash Screen

You can use the application "Screen Image Background Maker" to change the Splash Screen. Design the image with message you would like to present, upload it through web control page, and you could have customized starting page.

■ AP-Client Mode

You can enable the AP-Client Mode function to let wePresent join the existing Access Point through Wi-Fi. This feature provides the flexibility of wireless network deployment in enterprise environment.

■ Remote Desktop


Plug standard USB keyboard or mouse into the USB port in front panel of wePresent device, you can control your PC remotely. You don't have to stand still aside of PC or wePresent device, and it makes your presentation easily and freely.

➤ Features

- Support Windows Win7, Vista, XP, 2000 and Mobile 5/6
- Support Macintosh(Mac) version 10.5 and above.
- Plug and Show! No installation required ... just plug in the accompanied token to a USB port, and hassle free presentation can be started in seconds.
- 4-to-1 split screen projection! Turn one projector into four, increase meeting productivity right away.
- 1-to-4 screen projection! Project PC content to four screens, fulfill the need of multicasting purpose
- Smartphone wireless projection! PC-less stylish presentation becomes possible!
- Conference control! Allows moderators to streamline grand meetings.
- Provide session security login, wireless WEP/WPA key and Gatekeeper function to protect presentation contents and keep good security to office networks.
- Provide media playback feature, support music and video streaming.
- High Performance screen projection with audio!
- H.264 HD video streaming support!
- Changeable Splash Screen image!
- SNMP Manager! To manage the devices easily
- AP-Client Mode! Deploy wireless network in enterprise environment easily
- Remote Desktop!

2.Quick Start

- 1) Connect projector VGA cable to wePresent box VGA connector and turn on projector power.

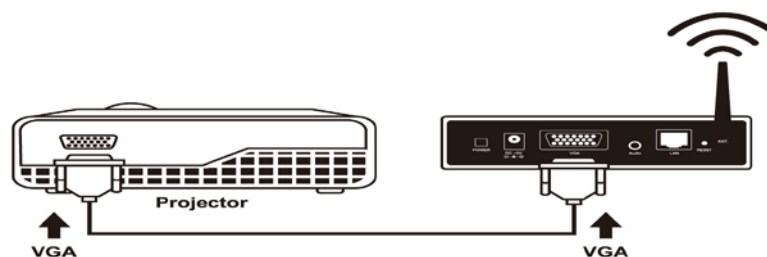


2) Turn on wePresent box.

- ◆ When Projector shows the default menu on the screen as below, it indicates the wePresent box is ready now.





- 3) Make sure your PC WLAN is enabled already, and connect your PC with wePresent box.
- 4) Open your browser and it will redirect to wePresent main page automatically, or you can enter the IP address to access the WPS web home page.
- ◆ The default IP address of wePresent is **192.168.100.10** or refers to the IP address shown on the left corner of projector screen.

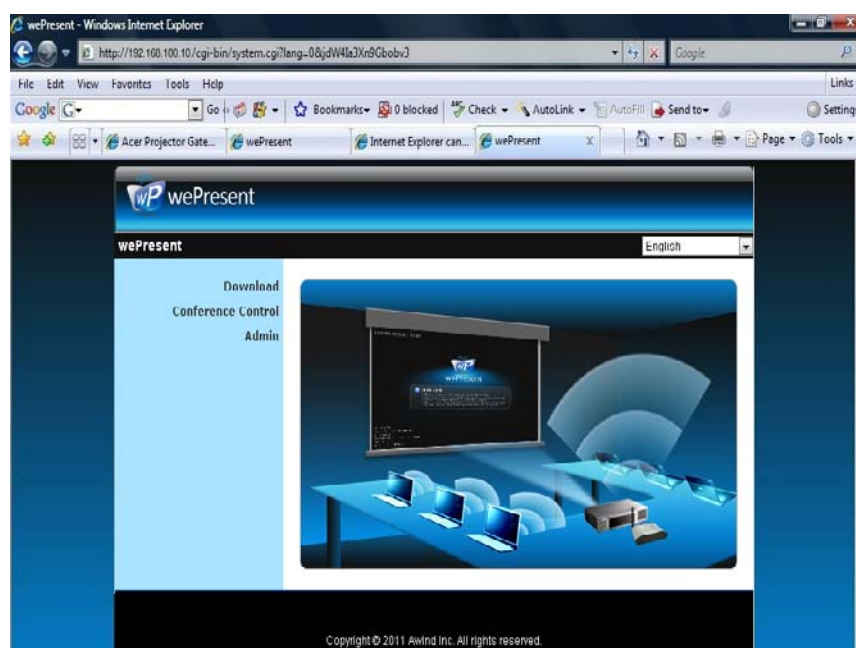


- 5) Download the client software. Please select the "Win7 / Windows Vista / XP / 2000" or "Mac Utility" and execute the installation program.

After installing the program, you will see the wePresent shortcut on the PC screen.

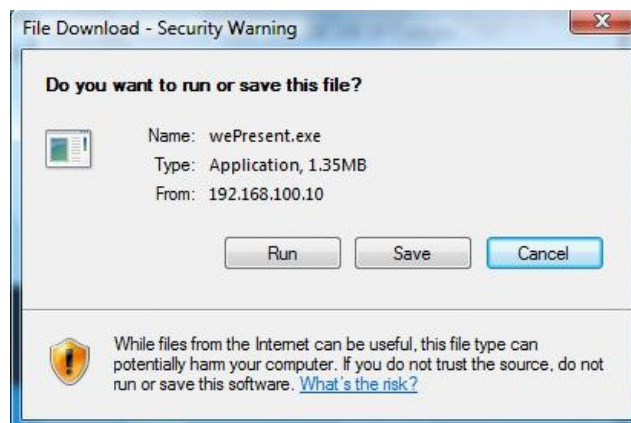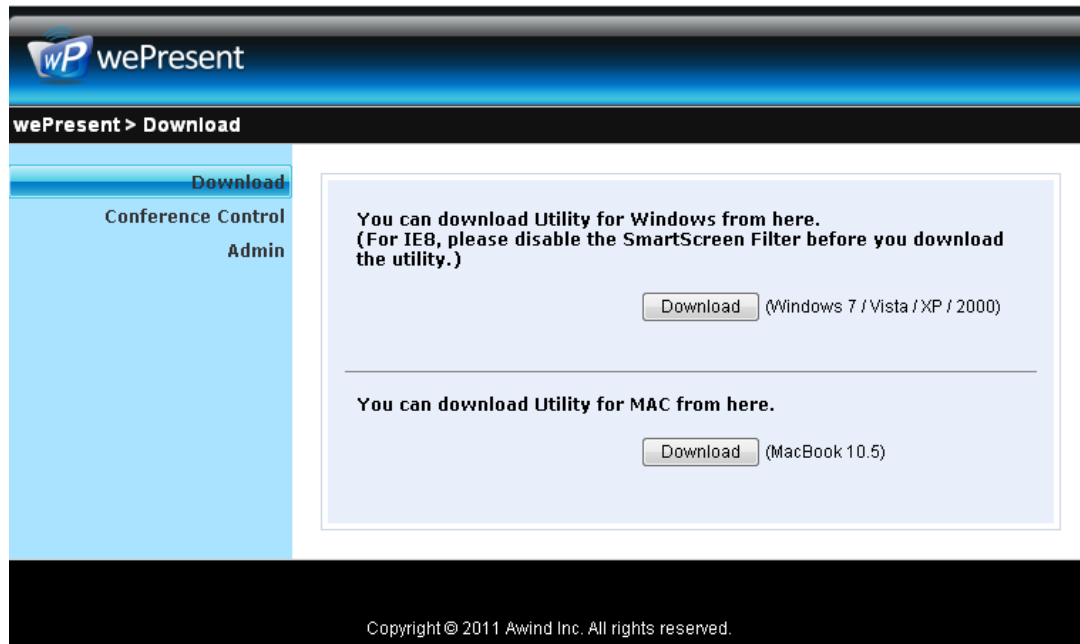

- 6) Make sure your personal firewall allows wePresent software to pass through.
- 7) Select devices that you would like to do projection

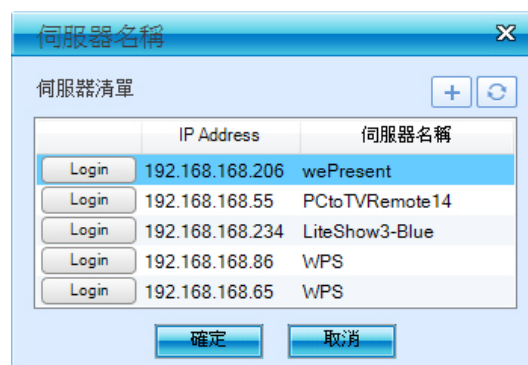

- 8) Enter the **LOGIN CODE** and You can see the login code on the projector screen



- 9) Click the **"Play"** button to start projection!



3.Windows Client Utility

3.1 Starting Program

After you download wePresent Windows program via web page successfully, then follow below steps to start.




- 1) Click wePresent icon to execute the program.
- 2) Program start to search for wePresent box automatically,
- 3) If wePresent box founded then **"Login Code"** dialog box will be pop up on the PC screen.

- **Searching for wePresent box**



- **wePresent boxes are founded and enter login code to start.**

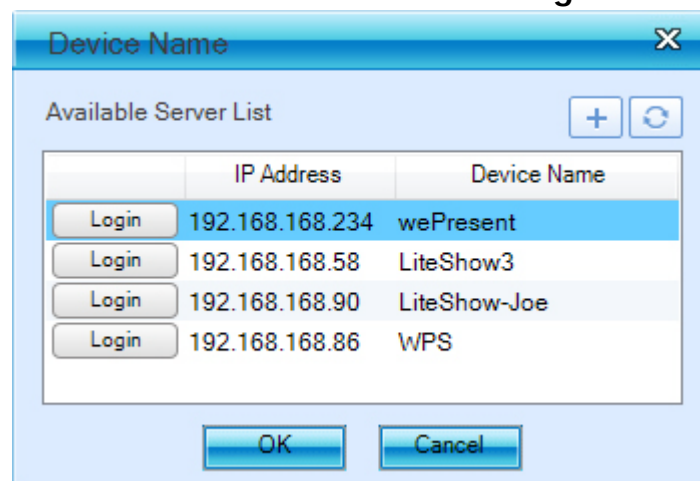


3.2 Login

- 1) After "Login Code" dialog box shown, enter login code to start presentation.
- 2) You can see the login code shown on the projector screen.



3.3 Main User Interface

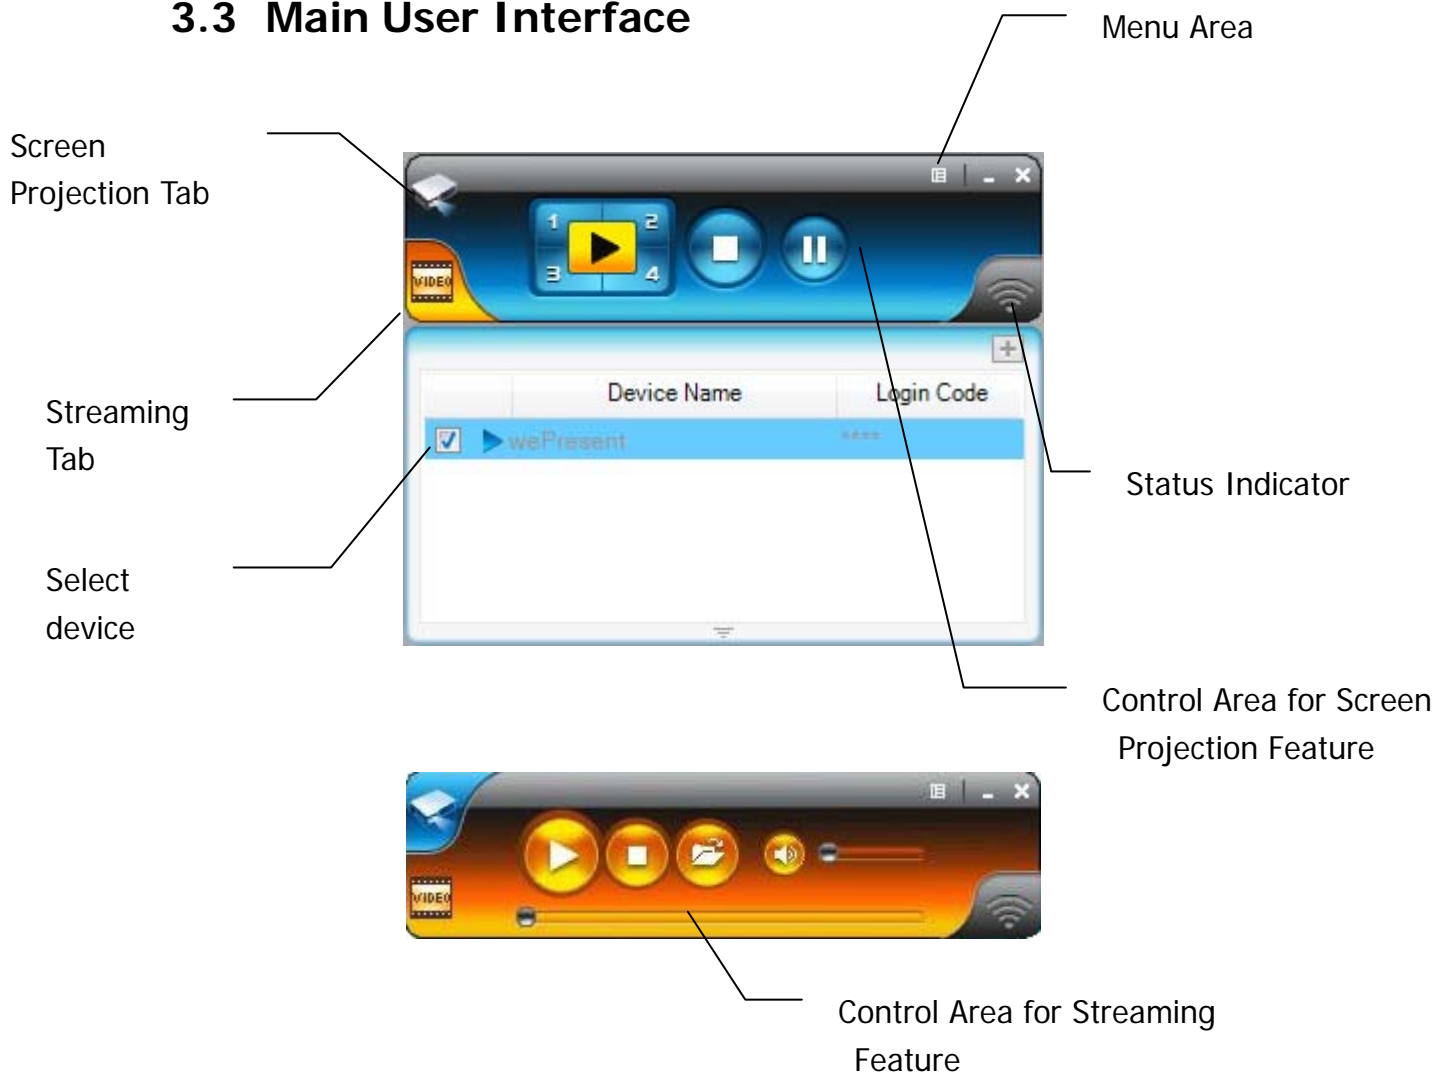








3.4 Screen Projection

Click the "Play" button for full or split screen, you can project the main screen on to the display immediately, click the "Pause" button, you can freeze you projection screen, and click the "Stop" button to stop projecting your screen.

*. To enable the audio projection, you have to install provided audio driver and set the projection quality to “Normal”.



Button	Description
	Full Screen projection
	Project to Split #1
	Project to Split #2
	Project to Split #3
	Project to Split #4
	Stop projecting
	Pause projecting


3.5 Audio Projection

First, before starting the Audio Projection, please install the “VAC.exe” (Virtual Audio Control) on your computer which is Windows XP. Please find the software in USB Token. (Windows Vista and Win7 don't need to install VAC)





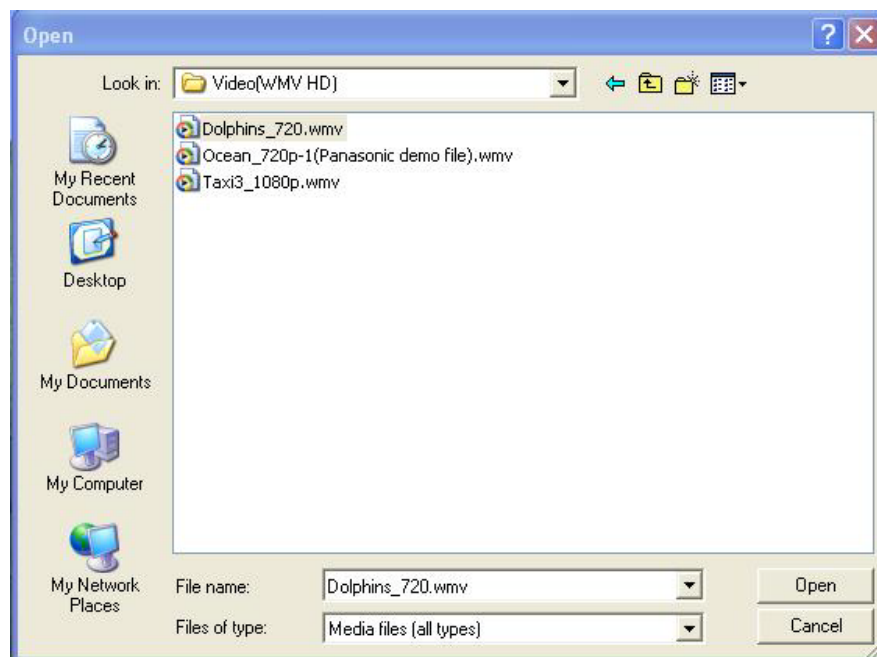

Second, it applies only under “Normal” option of the “Projection Quality”. Make sure these two steps, and you can hear the audio from device when projecting.

3.6 Video/Music streaming Feature


Click the “Video Tab” to switch to Video Mode, choose a video/audio file, then it will stream the original file to playback on the screen.



* Supported Video/Audio Format: MPEG1/2, DivX(3.4.5), XviD(MPEG4), H.264, WMV9, MP3, WMA


Button	Description
	Start Playing Video/Music
	Stop Playing Video/Music
	Open Video/Music File
	Mute
	Volume Level
	Progress Bar

3.7 Menu Description

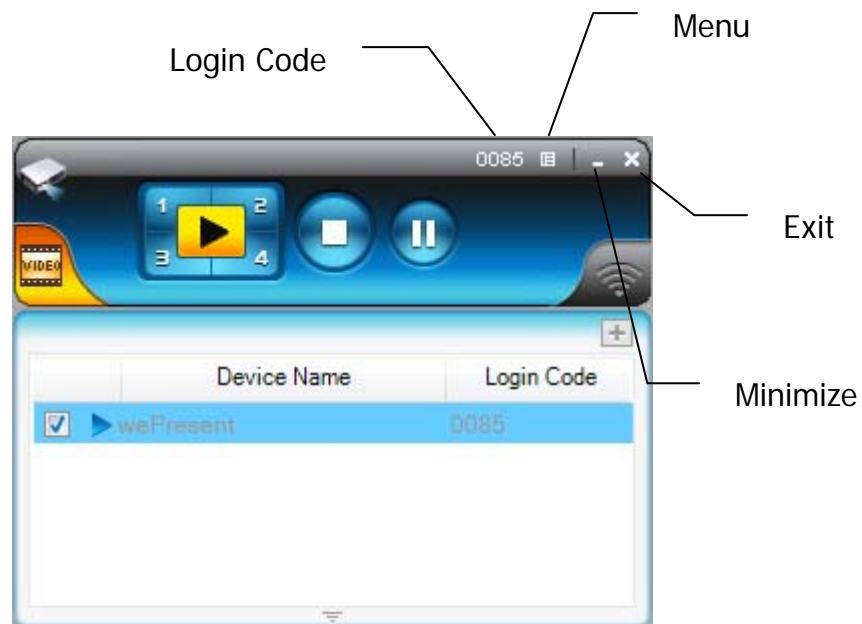


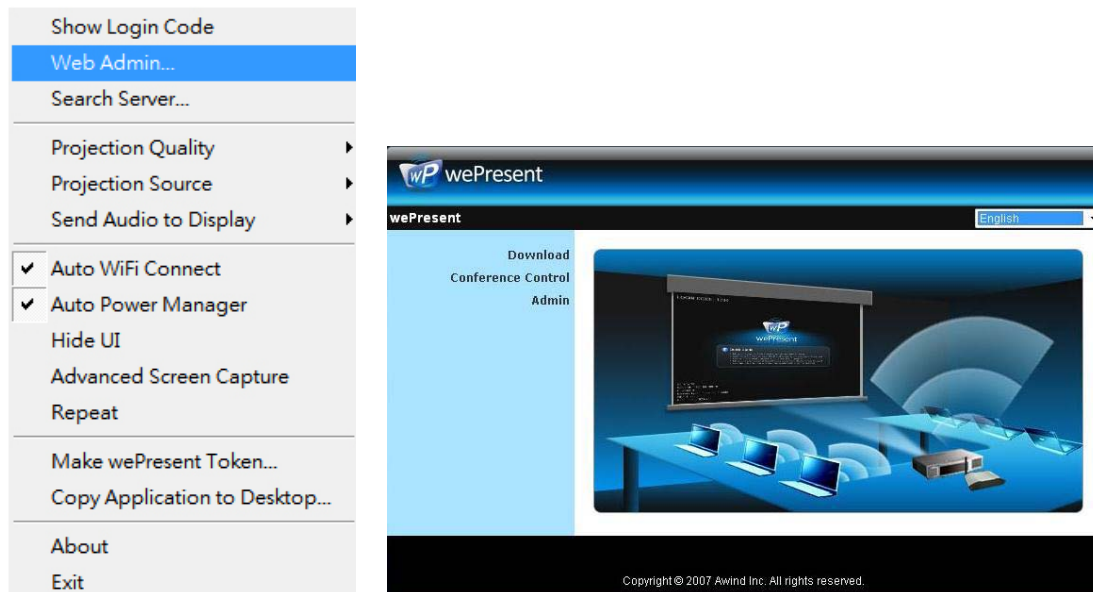
3.7.1 Show Login Code

Click "Show Login Code", it will display the login code on the right-upper of desktop and close it automatically after 10 seconds. You can also click on the area to close this window manually.

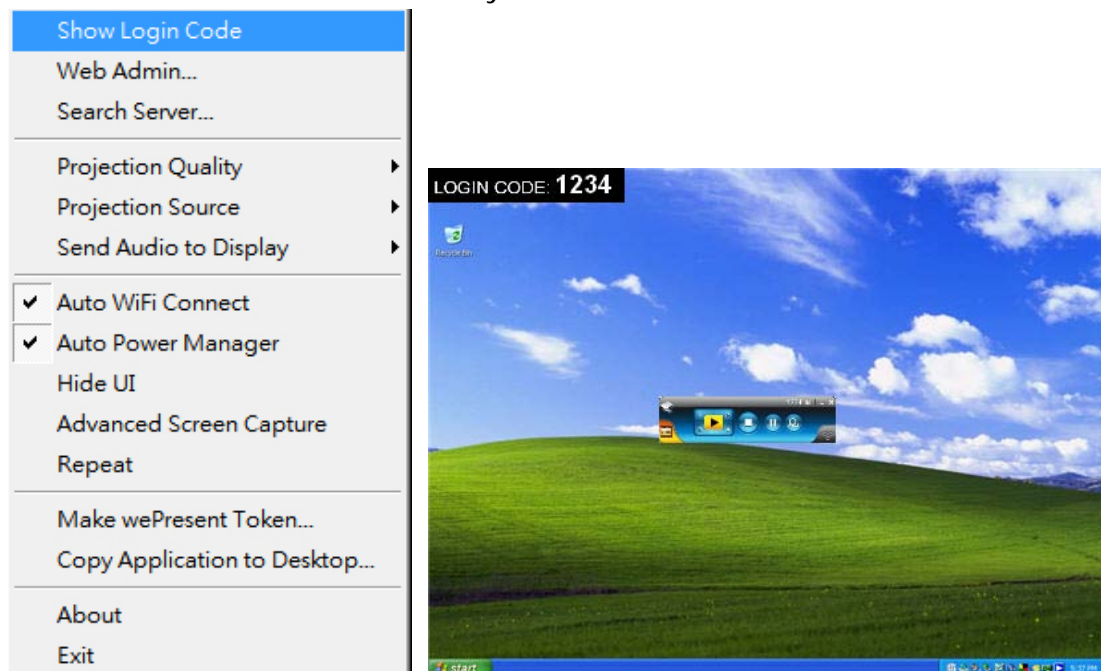


3.7.2 Open Admin Web Page

Click  to open function menu and select “**Web Admin**” management web page. The web page detailed functions will be described on next chapter.




3.7.3 Searching Server

Click “**Search Server**” to re-search the wePresent again.

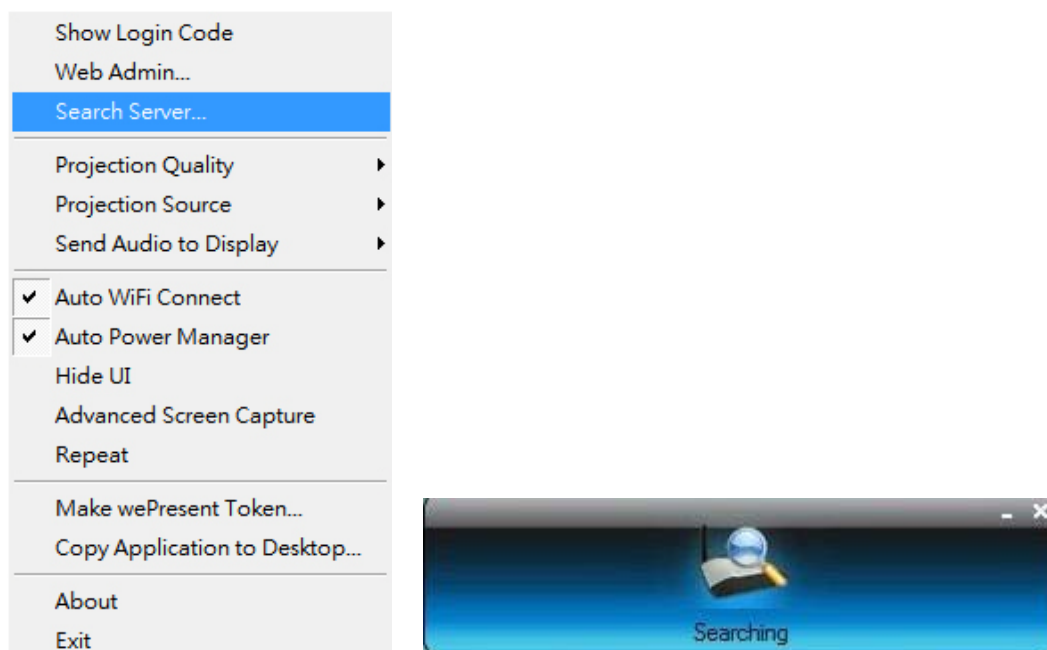


3.7.4 Projection Quality

Click the “Projection Quality”, choose “Normal” for faster projection speed with lower screen image quality, and “Best” for clear screen image quality but slower projection speed.

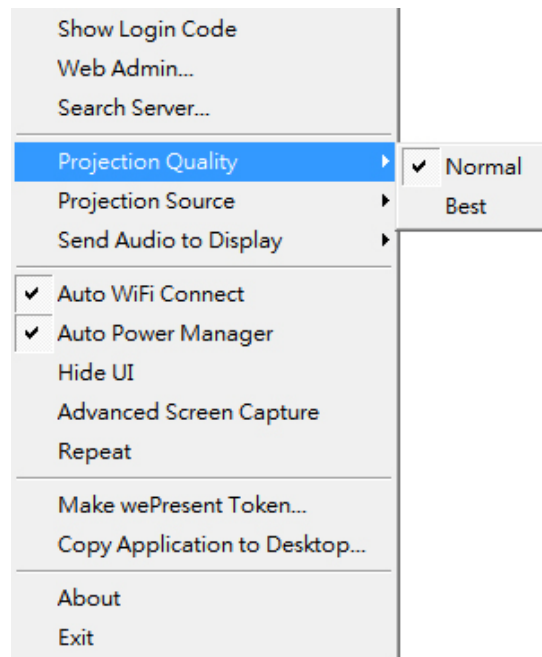

3.7.5 Projection Source

Click the “Projection Source” then you can select to project the main screen of desktop or the virtual extended screen.

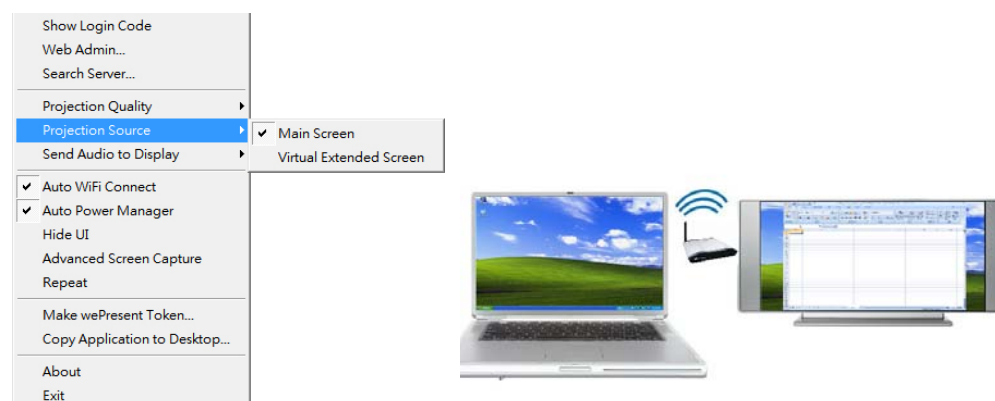


P.S: Virtual Extended Screen option

You need to install “VDD.exe” driver first which is stored in the USB token.


3.7.6 Send Audio to Display

Click “Send Audio to Display” then select the function you want to start audio projection or not.

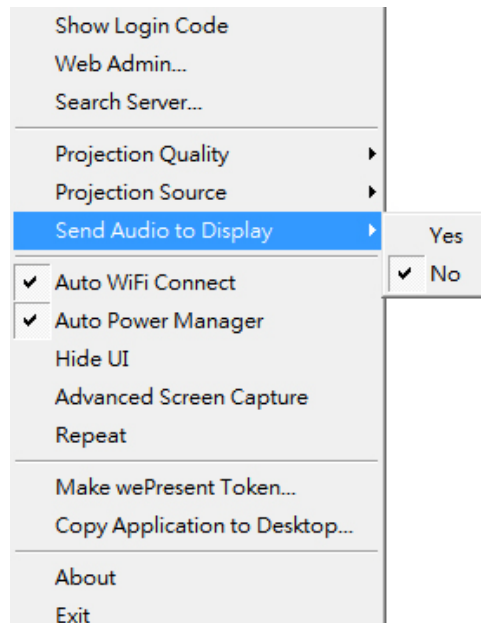


3.7.7 Auto WiFi Connect

Click “Auto WiFi Connect” to enable the AWZC function, this function can save the WiFi connection steps.

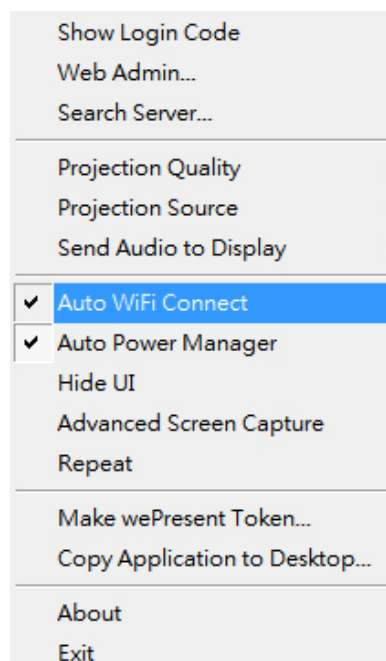

3.7.8 Auto Power Manager

To make the highest projection performance, application will turn the PC's windows power scheme from current settings to "highest performance", however, you can click the "Auto Power Manage" to enable or disable this function and restore you power scheme immediately.

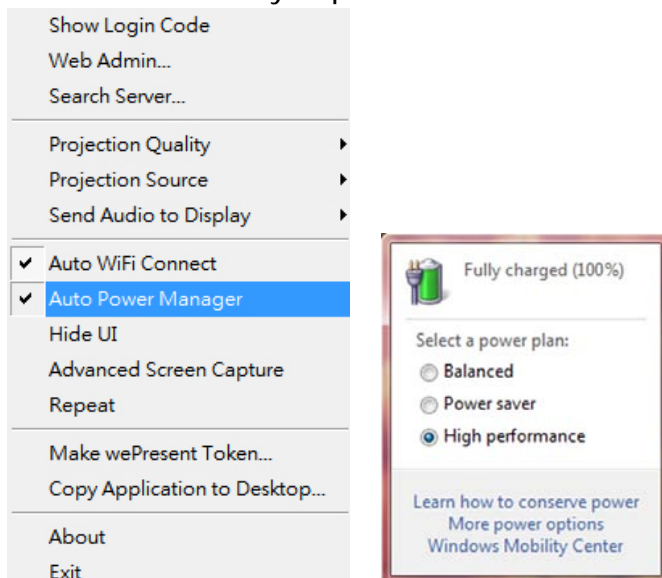

3.7.9 Hide UI


Click the "Hide UI", you can choose to hide or display the application control panel from projection screen.




3.7.10 Advanced Screen Capture

Click the “Advanced Screen Capture”, you will be able to see tip windows and other layered windows (include the main UI) on the connected display. However, the mouse cursor may blink from time to time when you are projecting your PC screen!

- Disable “Advanced Screen Capture”.

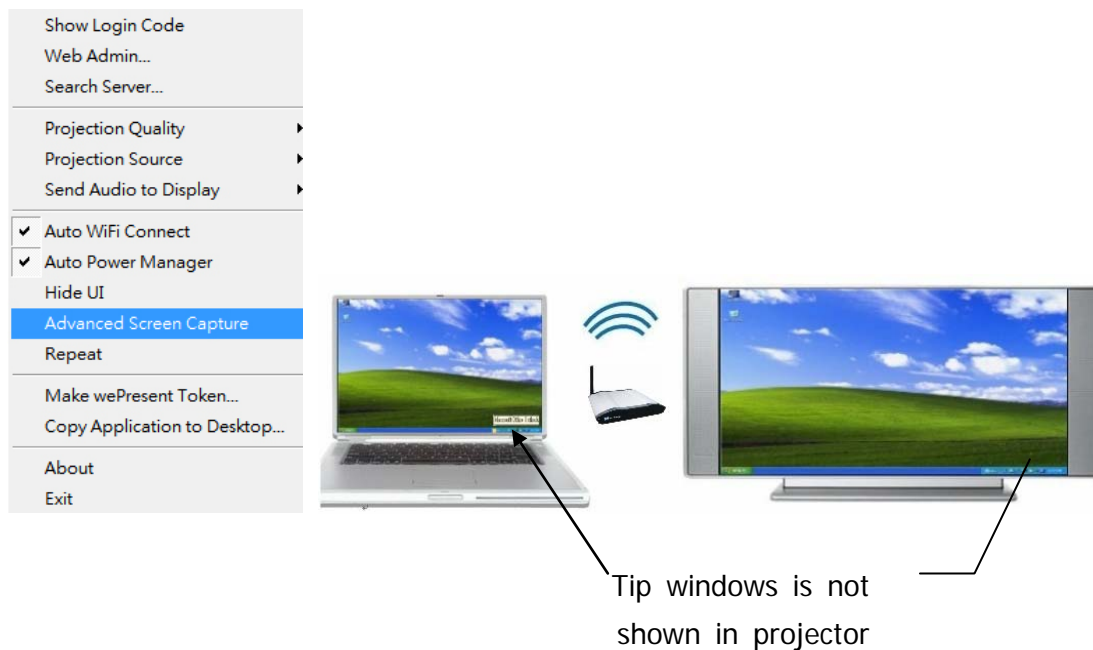


- Enable “Advanced Screen Capture”.

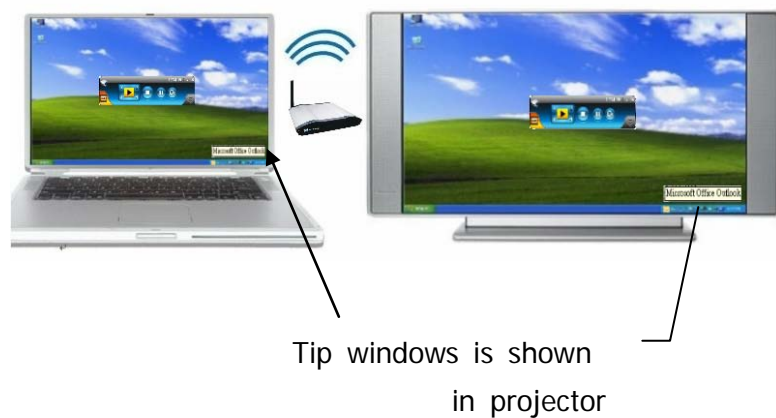


3.7.11 Repeat


Click the "Repeat", you can choose to playback current video/audio file repeat or not.

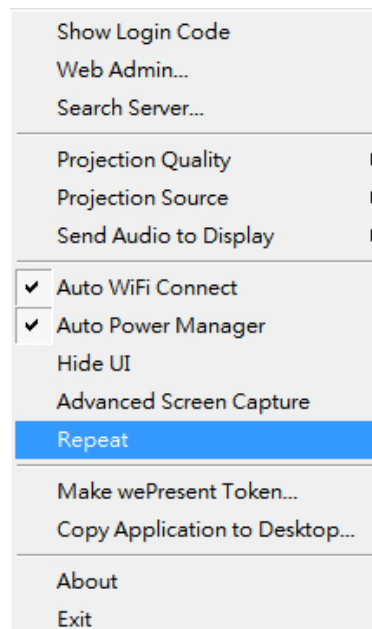

3.7.12 Make wePresent Token


Click "Make wePresent Token" to make a USB wePresent Token, you can insert a USB thumb drive and follows the wizard to make the Token.

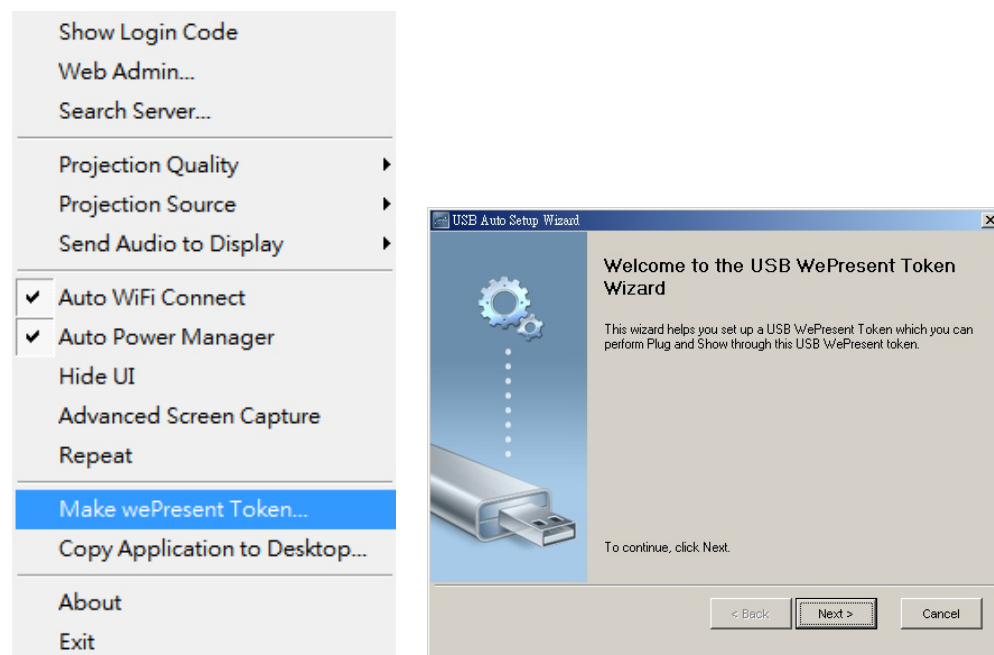

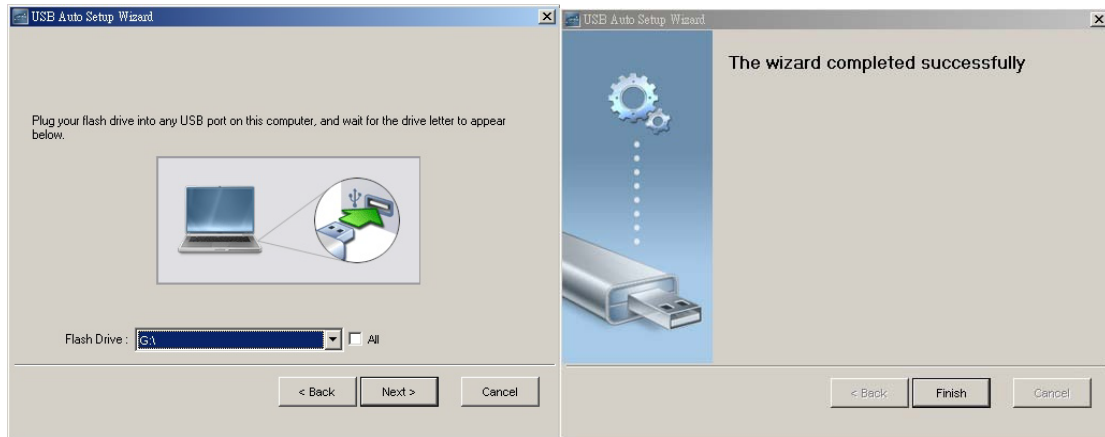


3.7.13 Copy Application to desktop

Click the “Copy Application to desktop”, it will copy the application to your desktop immediately even you don’t have the system privilege

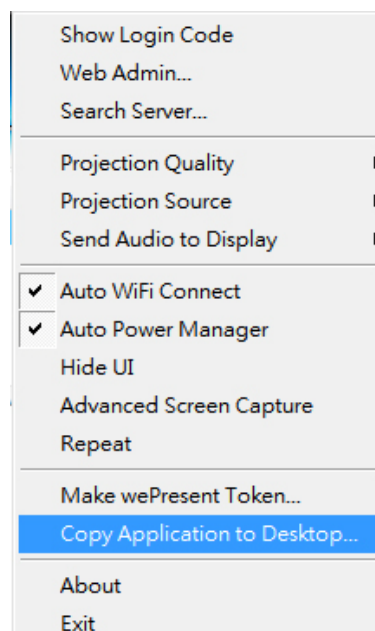


3.7.14 About

Click “**About**” to show system information. It includes product model name, Client version, IP address and other information.

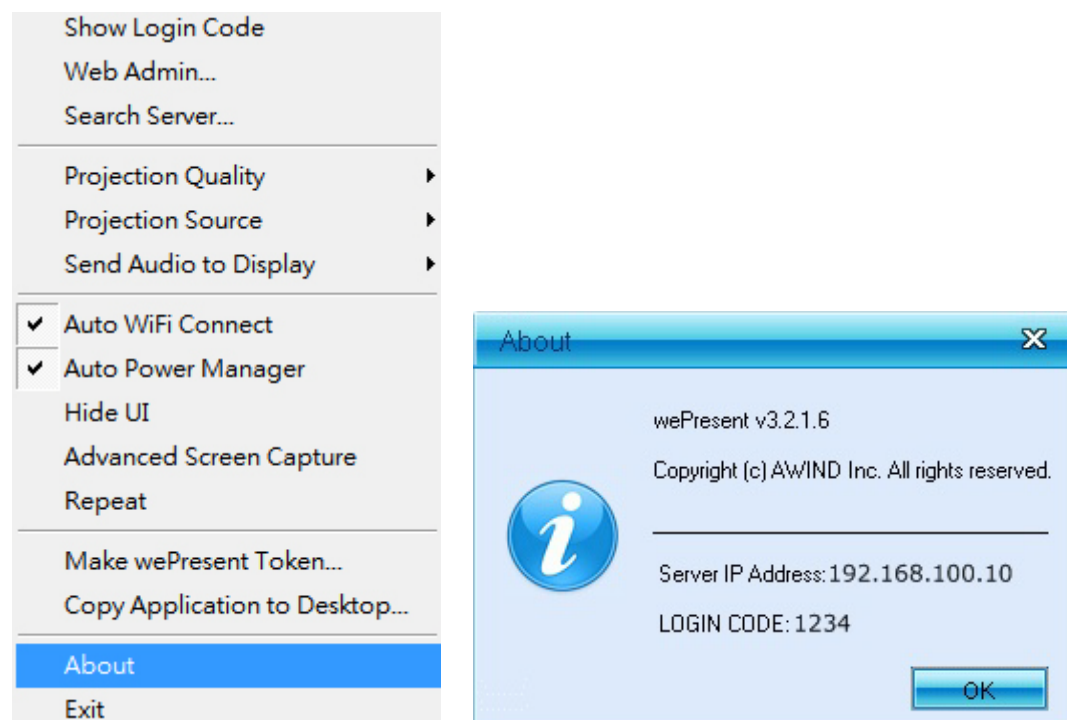

3.7.15 Exit

Click “**Exit**” to exit this application. It will stop current playing status and close the application immediate.

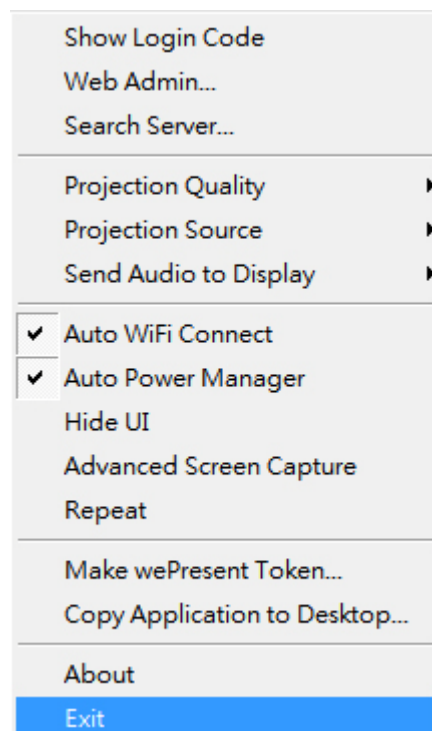


4.Windows Mobile Utility

4.1 Install MobiShow Client by USB Token


- 1) Find the MobiShow_WM5_1302.cab in USB Token.
- 2) Connect your phone and laptop by USB connecting line and copy the MobiShow client to phone.
- 3) Double click on the CAB file to start installation.
- 4) Follow on-screen instructions to finish installation.

4.2 Using MobiShow with a Smartphone

- 1) Open "Programs" on your phone and find "MobiShow" application.
- 2) Select "MobiShow" icon  to launch the client software.
- 3) MobiShow will turn on Wi-Fi on your phone and list available access points for you to choose.



- 4) Select a MobiShow wireless network (SSID with prefix MobiShow) to connect to.
- 5) MobiShow client will connect to that access point and search for MobiShow devices automatically. When a MobiShow device is found, it will automatically login and the following main menu is shown on your phone.

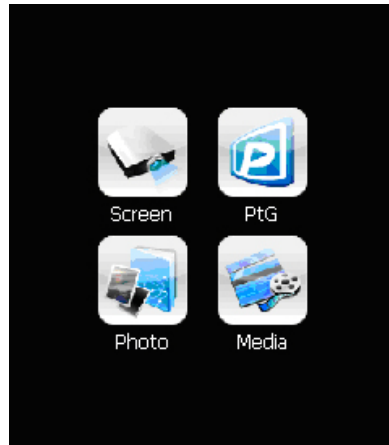

- If more than one MobiShow devices are found, the following list will be displayed for you to select the one to use.




- 1) Select which feature to use. To project the screen of your phone, click on the "Screen" icon. To do a PC-less presentation with Presentation-to-Go (PtG), select the "PtG" icon. To play a video or MP3 from your phone, select the "Media" icon.

- Screen Projection:

MobiShow will project anything displayed on your screen. You may launch another application (such PowerPoint Viewer) or open any file (such as Word document or JPG image) and it will be projected to the projector.

Note: Do not exit MobiShow application while opening other application to keep screen projected.

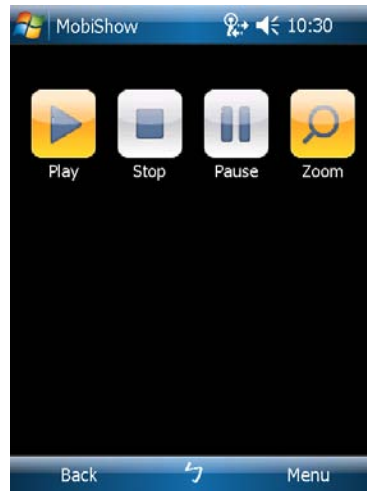

Click the "Stop" icon to stop projection.

Click the "Pause" icon to pause projection. Click "Pause" again to resume projection.

Click the "Zoom" icon to zoom the projected screen to extend the longest side of your screen to fill the screen.

Click the "Play" icon to start projection again if it is stopped.

Click the "OK" button or "Back" to return to main menu.

- **Wireless PtG:**

When you select PtG function, MobiShow client will automatically open Explorer for you to select a PtG file. Select the file to open for your presentation. When the file is open, the PtG slides will be projected, and the following screen is displayed on your phone for you to control your PtG presentation.

You need to use "PtG converter.exe" to convert Powerpoint become PtG file first. You can find out "PtG converter.exe" in the USB Token



Click "Prev" or "Next" to go to the previous or next item in the slide.

Click "PgUp" or "PgDn" to go to previous or next slide.

Click "Stop" to stop projecting the file. The icon will become "Play" if the file is not played. Click "Play" again to play the file if it is stopped.

Click "Home" to go to the first slide.

Click "Jump" and MobiShow client will show every slide on the phone. You can select any page to go to.

Click "Open" to select another PtG file.


Note:

You may find PtG converted in the USB Token for your testing.

- Photo Slideshow:

You can use MobiShow to project photos stored on your phone to big screen. The photos will be prepared for playback on big screens rather than for the tiny screens of your phone.

To open a single photo, select one photo and click the OK button. The photo will be displayed on the display connected to MobiShow device.

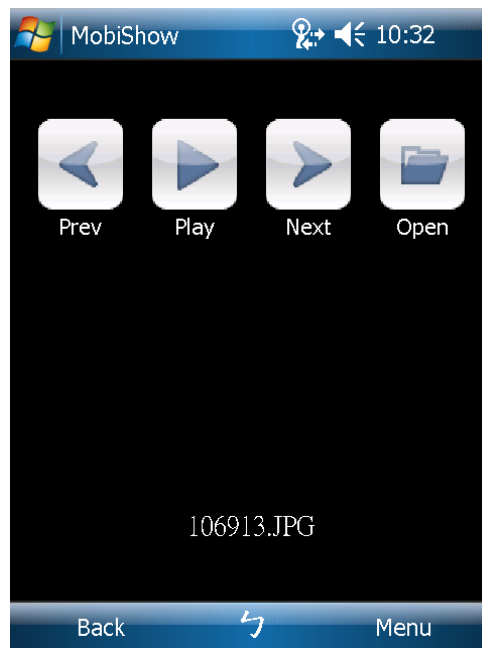

Click "Prev" or "Next" to go to the previous or next photo in the same folder.

Click "Play" to start photo slideshow with photos in the same folder. The button will be changed to "Pause" during slideshow. Click "Pause" to stop slideshow.

- Media Sender:

When you select Media Sender function, MobiShow client will automatically open Explorer for you to select a media file. Select a file (videos in mpeg or wmv9 format, or MP3 music files) to play. The file will be streamed to MobiShow device. It may take a few seconds to buffer before the playback begins, depending on the wireless signal and media bit rate.



When the file is open, the media will be projected, and the following screen is displayed on the phone for you to control your media playback.

Click "FR" or "FF" to seek backward or forward.

Click "Vol-" or "Vol+" to adjust volume for playback.

Click "Stop" to stop playing the file. The icon will become "Play" if the file is not played. Click "Play" again to play the file if it is stopped.

Click "Mute" to mute the audio. Click "Mute" again to bring audio back.

Click "Open" to select another media file.

- 2) When you are in the main menu, click the "OK" button or "Back" again to close the application.

5. Mac Client Utility

5.1 Launch Application

- 1) Enable your WiFi and connect to wePresent device.
- 2) Execute wePresent client software for Mac.




- 3) Launch wePresent software and enter the login code.



- 4) Start Projection.





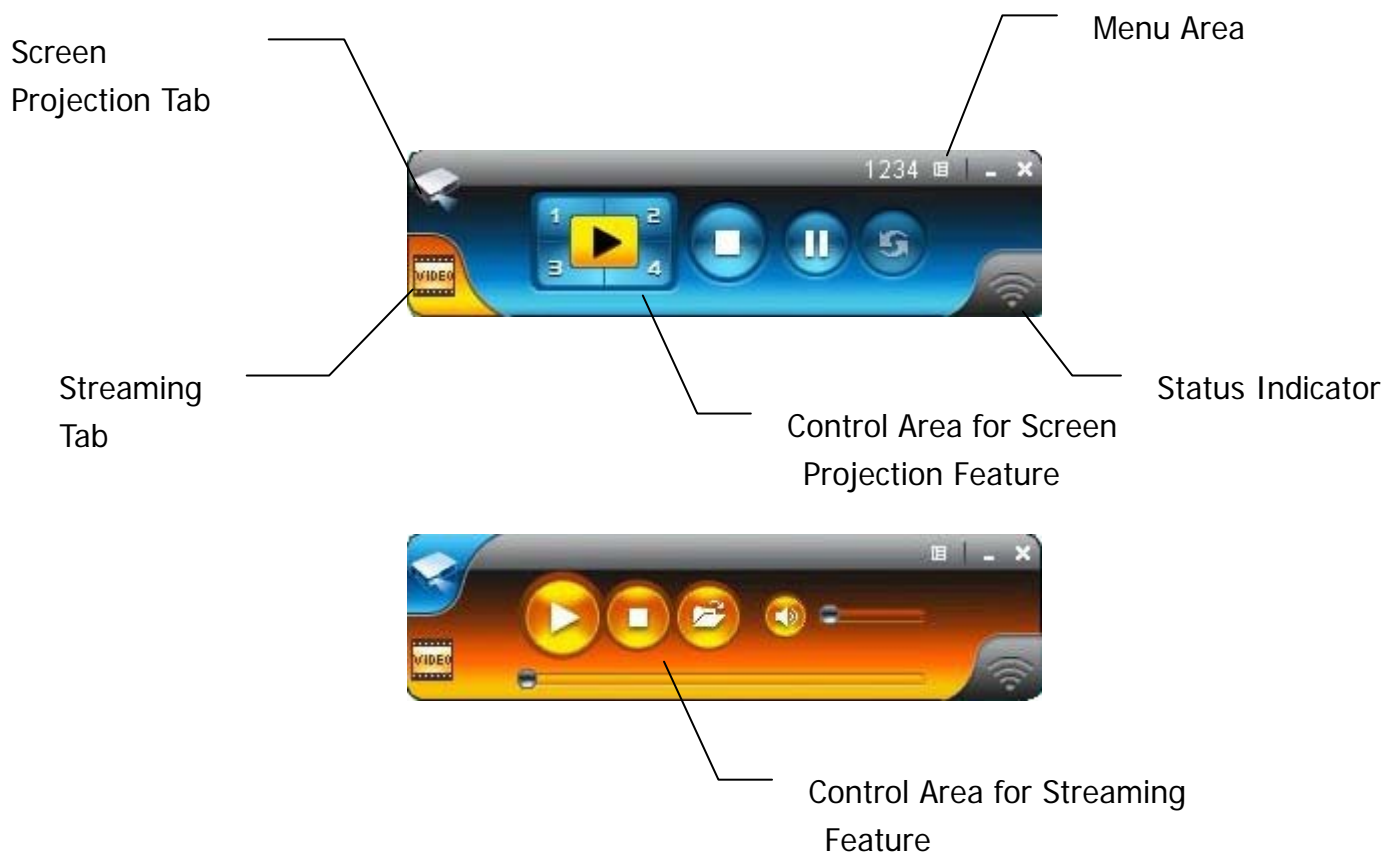





5.2 Main User Interface



5.3 Screen Projection

Click the “Play” button for full or split screen, you can project the main screen on to the display immediately, click the “Pause” button, you can freeze you projection screen, and click the “Stop” button to stop projecting your screen.




Button	Description
	Full Screen projection
	Project to Split #1
	Project to Split #2
	Project to Split #3
	Project to Split #4
	Stop projecting
	Pause projecting
	Refresh Screen





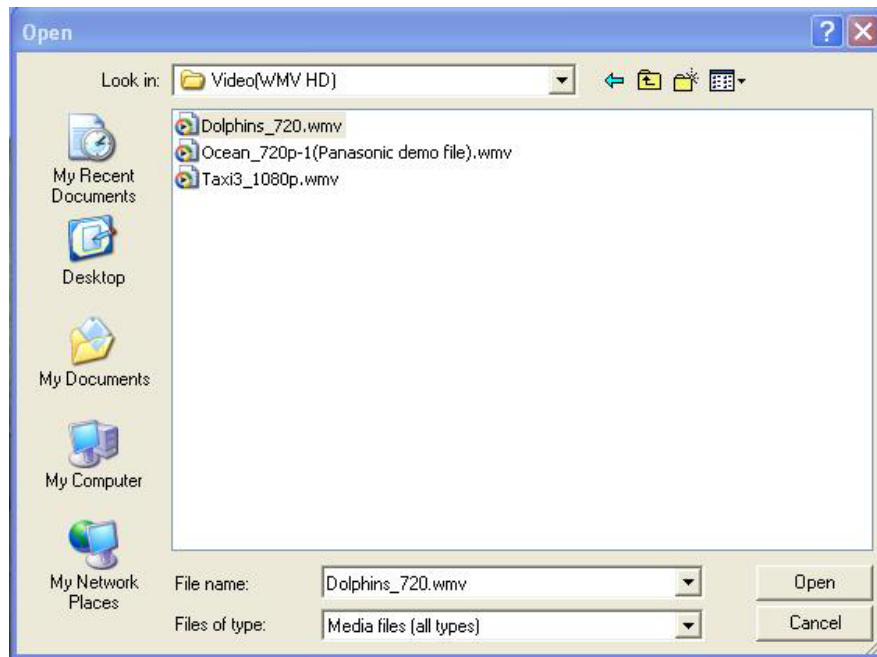

5.4 Video/Music streaming Feature

Click the “Video Tab” to switch to Video Mode, choose a video/audio file, then it will stream the original file to playback on the screen.






* Supported Video Format: MPG, MPEG, DAT, VOB, WMV9, ASF, MP3, WAV, H.264.

Button	Description
	Start Playing Video/Music
	Stop Playing Video/Music
	Open Video/Music File
	Mute
	Volume Level
	Progress Bar

6. Web Management

6.1 Home Page



1. Make sure your PC connect to wePresent box successfully.
2. Open your browser, it will enter wePresent home page automatically.
3. If not, enter your IP address on the browser, you can see the IP on the projector screen.
4. The default IP is 192.168.100.10

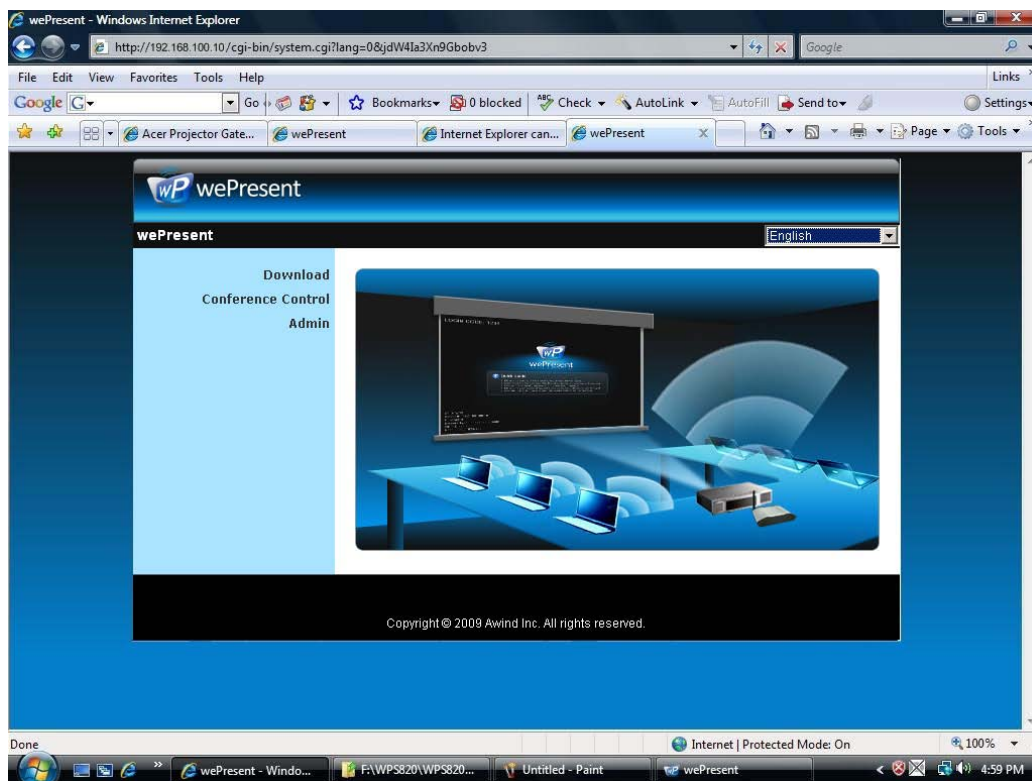

6.2 Download Software

1. Select "Download software" function.
2. Please select the "Win 7 / Windows Vista / XP / 2000" or "Mac Utility" and execute the installation program.
3. Follow Installation Wizard instructions to proceed till the installation process complete.
4. If pop up "**Windows Security Alert**" because Windows firewall block this



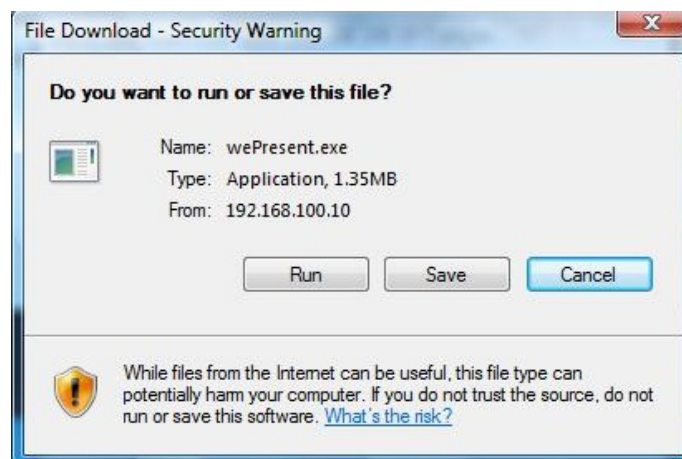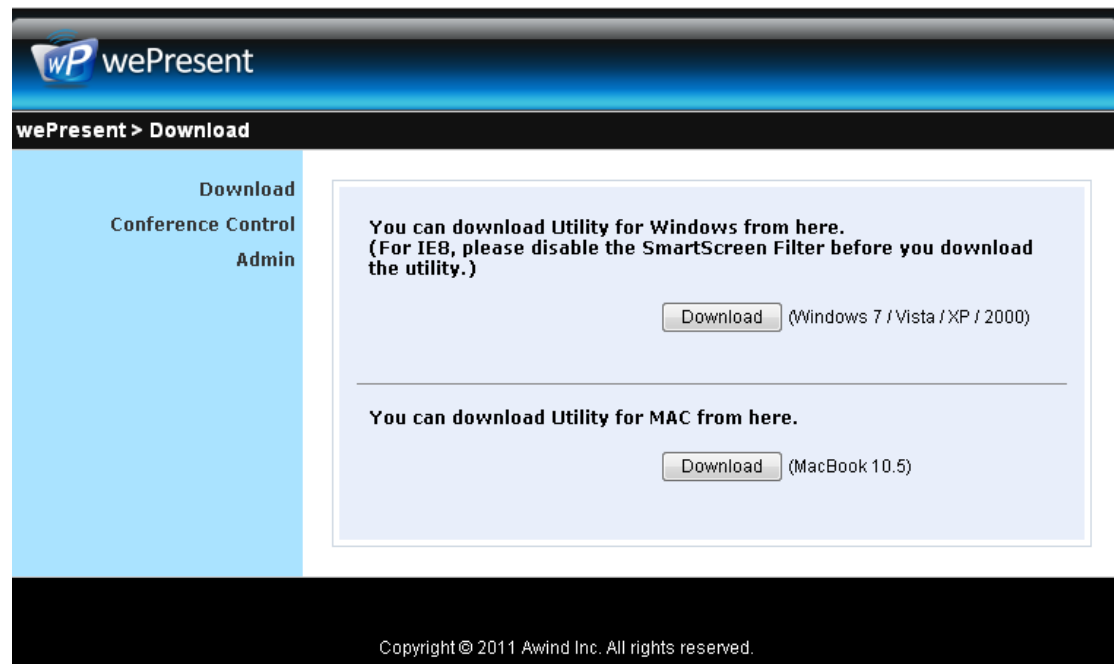



- program. You just press “**Unblock**” button to continue installation.
5. Once installation complete, a utility shortcut come out on the screen.











 







 
 


6.3 Conference Control


- 1) This function allows you to host a meeting smoothly without projector cable swapping and each participant can show their presentation easily.
- 2) Select “**Conference Control**” function.
- 3) Enter password, the default value is “trainer”, and then press [Login].



- 4) After login, you can see a User List on the screen which indicates all of users connected to WEPRESENT box.
- 5) There are three columns, "**Computer Name**", "**Play Control**" and "**IP Address**".
- 6) Play Control › There are six buttons, including Play(Full) , Play Split #1 , Play Split #2 , Play Split #3 , Play Split #4  and Stop .
- 7) User List

wePresent > Conference Control			Logout
Computer Name	Play Control	IP address	
eunicewu	 1 2 3 4 	192.168.100.12	
sandrahsieh	 1 2 3 4 	192.168.100.13	
simon_huang	 1 2 3 4 	192.168.100.14	
howardling	 1 2 3 4 	192.168.100.15	
Jenniferlu	  2 3 4 	192.168.100.16	
ashleychuang	 1  2 3 4 	192.168.100.17	
firmanwu	 1 2  3 4 	192.168.100.18	
ptchou	 1 2 3  4 	192.168.100.19	

6.4 Login Web Admin



wePresent

wePresent > Admin

Download
Conference Control
Admin

User Name **admin**


Password

Login

Copyright © 2009 Awind Inc. All rights reserved.


1. Click [**Admin**] and then enter password to login web page.
2. The password default value is "admin".

6.4.1 System Status

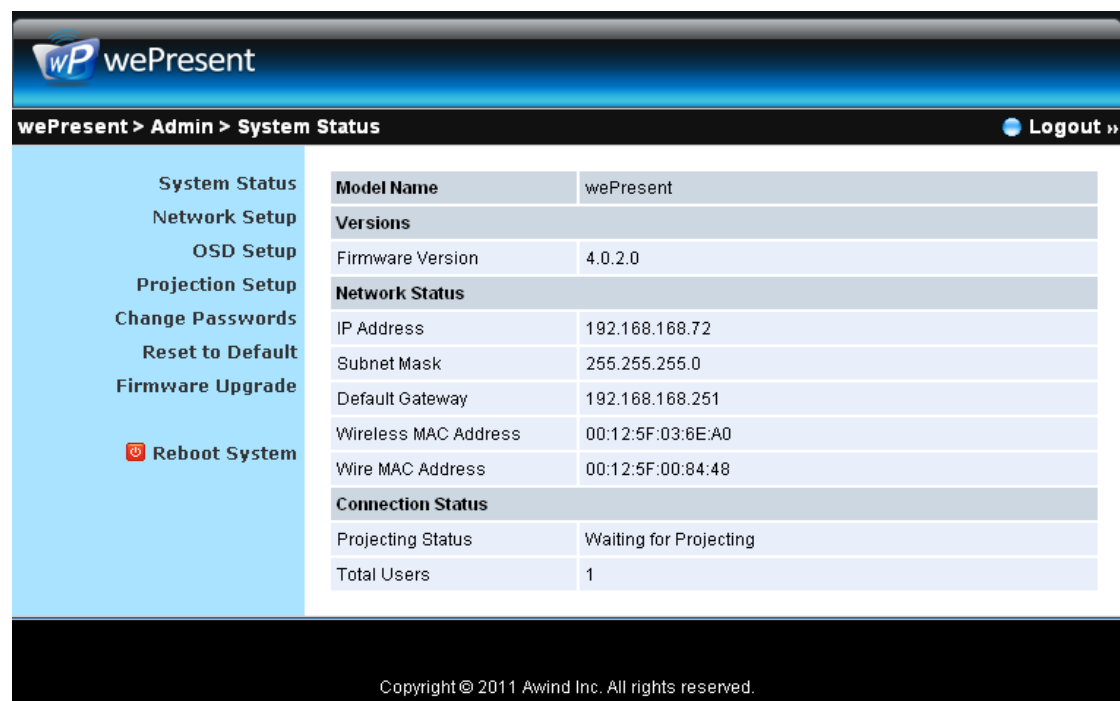

wePresent

wePresent > Admin > System Status Logout »

System Status
Network Setup
OSD Setup
Projection Setup
Change Passwords
Reset to Default
Firmware Upgrade
 Reboot System

Model Name	wePresent
Versions	
Firmware Version	4.0.2.0
Network Status	
IP Address	192.168.168.72
Subnet Mask	255.255.255.0
Default Gateway	192.168.168.251
Wireless MAC Address	00:12:5F:03:6E:A0
Wire MAC Address	00:12:5F:00:84:48
Connection Status	
Projecting Status	Waiting for Projecting
Total Users	1

Copyright © 2011 Awind Inc. All rights reserved.

Click [**System Status**], shows current system status.

Model Name: Product model name

Versions:

1. **Firmware version no.:** Product firmware version number.

Network Status:

1. **IP address** : IP address of WPS device.
2. **Subnet Mask** : subnet mask
3. **Default Gateway** : default gateway
4. **Wireless MAC address** : wireless MAC address
5. **Wire MAC address** : wire MAC address

Connection Status:

1. **Projecting status**: which is "Waiting for projecting" or "Projecting"
2. **Total Users**: It shows how many users login into wePresent box.

6.4.2 Network Setup

There are many kinds of operating configurations as below.

wePresent

wePresent > Admin > Network Setup Logout

System Status
Network Setup
OSD Setup
Projection Setup
Change Passwords
Reset to Default
Firmware Upgrade
Reboot System

IP Setup

☒ Obtain an IP address automatically ☐ Use the following IP address

IP Address: 192 . 168 . 100 . 10
Subnet Mask: 255 . 255 . 255 . 0
Default Gateway: 192 . 168 . 100 . 10
DNS Server: 192 . 168 . 100 . 10

DHCP Server Setup

☒ Auto ☐ Disable

Start IP: 192 . 168 . 100 . 11
End IP: 192 . 168 . 100 . 254
Subnet Mask: 255 . 255 . 255 . 0
Default Gateway: 192 . 168 . 100 . 10
DNS Server: 192 . 168 . 100 . 10

Wireless Setup

Wireless LAN: ☒ Enable ☐ Disable
Embedded AP SSID: wePresent
Region: WORLDWIDE
SSID Broadcast: ☒ Enable ☐ Disable
Channel: Auto
Encryption: Disable
Key:

Ap Client

Connect to Existing AP: ☐ Enable ☒ Disable
Existing AP SSID:
Encryption: Disable
Key:

GateKeeper

☐ All Pass ☐ All Block ☒ Internet Only

Apply Cancel

Copyright © 2011 Awind Inc. All rights reserved.

< Auto-Configuration Network Setup>

The default setting of the wePresent box is DHCP client. When the wePresent box is connected to a LAN that already has a DHCP server present, the wePresent box takes an IP address assigned to it by the server. When the wePresent box is connected to a LAN that does not have a DHCP server, the wePresent box becomes the DHCP server in the network.

< IP Setup>

- ◆ You can select "obtain IP address automatically" or "Use the following IP address"
- ◆ IP Address: The default value is 192.168.100.10.
- ◆ Subnet Mask: The default value is 255.255.255.0
- ◆ Default Gateway: The default value is 192.168.100.10
- ◆ DNS Server: The default value is 192.168.100.10

<DHCP Server Setup>

- ◆ You can select "auto(Enable/Disable DHCP Server" or "Disable")
- ◆ Start IP: The start IP address of DHCP Server.
- ◆ End IP: The end IP address of DHCP Server
- ◆ Subnet Mask: The default value is 255.255.255.0
- ◆ Default Gateway: The default value is 192.168.100.10
- ◆ DNS Server: The default value is 192.168.100.10

< Wireless Setup>

- ◆ Wireless LAN: The default value is "Enable"
- ◆ Region: default value is "Worldwide".
- ◆ SSID: SSID string, max. Length is 32 bytes.
- ◆ SSID Broadcast: The default value is "Enable"
- ◆ Channel: to set fixed channel or Auto. The "Auto" means after power on wePresent, it will scan all of wireless channel and select clear one channel automatically.
- ◆ Encryption: you can select "Disable" or one of WEP/WPA/WPA2 64bit or 128bit in ASCII or HEX string.
- ◆ Key: If Encryption is enabled, you have to set key value according to the encryption mode you selected.

< AP Client>

- ◆ Connect to Existing AP: Input the SSID of Home WiFi AP you want to connect.
- ◆ Encryption: you can select "Disable" or one of WEP/WPA/WPA2 64bit or 128bit in ASCII or HEX string.
- ◆ Key: If Encryption is enabled, you have to set key value according to the encryption mode you selected.

< Gatekeeper>

Gatekeeper is designed for ensuring the enterprise network security within wePresent box


- ◆ All Block can block Guest Users(through wireless) to access all office network(LAN),
- ◆ All Allow can pass Guest Users(through wireless) to access all office network
- ◆ Internet Only can block Guest Users (through wireless) from office network (LAN) but still reserve internet connection capability.

<Apply >: press button to select this mode.

<Cancel>: press button to abort action.

<Back>: Back to Operating mode main menu.

6.4.3 OSD Setup

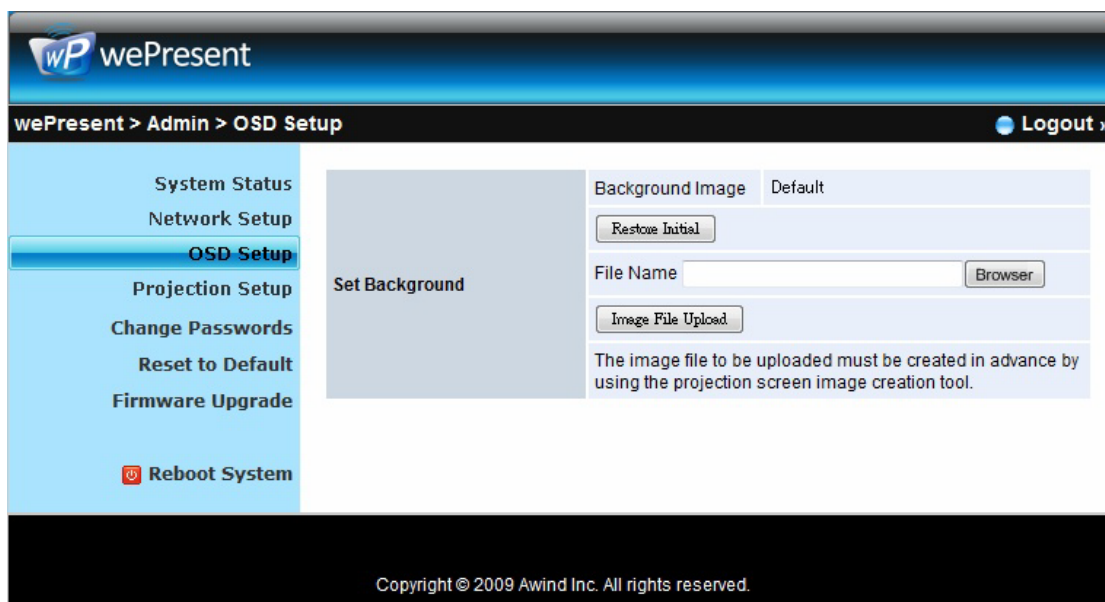

Click [**OSD Setup**] button, to change OSD standby image.

- ◆ <**Restore Initial**>: Restore to default OSD standby image.
- ◆ <**Image File Upload**>: Upload the customized OSD standby image. (You need to convert the image to system defined format using provided IB Maker utility which is stored in the USB token.)

6.4.4 Projection Setup



wePresent > Admin > Projection Setup [Logout »](#)

Projection Setup

Resolution	XGA (1024x768)
Screen Refresh Rate	60 Hz
Login Code	<input type="radio"/> Disable <input checked="" type="radio"/> Random <input type="radio"/> Use the following code <input type="text"/>

Copyright © 2010 Awind Inc. All rights reserved.

Click **[Projection Setup]** button

- ◆ **<Resolution>**: XGA(1024*768), WXGA(1280x768, 1280x800) and SVGA(800*600). The default value is XGA.
- ◆ **<Color Depth>**: provide wePresent output with 16bit or 32 bit color depth. It depends on your PC settings.
- ◆ **<Screen Refresh Rate>**: This is VGA output refresh rate, provides 60 Hz and 75Hz to suit for different kinds of projectors.
- ◆ **<Login Code>**: You can select "Disable", "Random", or "Use the following code" to set a specified 4-characters Number.
- ◆ **<Apply>**: Confirmation and Save modifications
- ◆ **<Cancel>**: Cancel all the modifications

6.4.5 Change Passwords

The screenshot shows the wePresent Admin interface. The top header has the wePresent logo and a 'Logout »' button. The breadcrumb trail is 'wePresent > Admin > Change Passwords'. On the left sidebar, the 'Change Passwords' option is highlighted. The main content area contains two sections: 'Conference Control' and 'Admin'. Each section has two input fields for 'Enter New Password' and 'Confirm New Password', followed by an 'Apply' button. At the bottom of the sidebar, there is a 'Reboot System' button with a power icon. The footer contains the copyright notice: 'Copyright © 2010 Awind Inc. All rights reserved.'

Click **[Change Password]** button, to change password value.

The length of password is up to 8 characters.

- ◆ **<Enter New Password>**: enter new password you want to change for each category.
- ◆ **<Confirm New Password>**: double confirm new password.
- ◆ **<Apply>**: Confirmation and Save modifications.

6.4.6 Reset to Default


The screenshot shows the wePresent Admin interface for the 'Reset to Default' page. The top header has the wePresent logo and a 'Logout »' button. The breadcrumb trail is 'wePresent > Admin > Reset to Default'. On the left sidebar, the 'Reset to Default' option is highlighted. The main content area features a yellow warning triangle icon, the title 'Reset to Default', and the text 'This will restore the device to the factory default settings.' Below this, there is an 'Apply' button. The footer contains the copyright notice: 'Copyright © 2010 Awind Inc. All rights reserved.'

Click **[Reset to Default]** button to restore factory default settings.

<Apply>: Confirmation and action.


***** Another way to restore Factory Default Settings, Follow below procedures.**

1. Press **[Reset]** button and **Hold**.
2. Turn on wePresent box.
3. Wait for over 10 seconds and relief **[Reset]** button.
4. It will take effect to restore factory default settings.

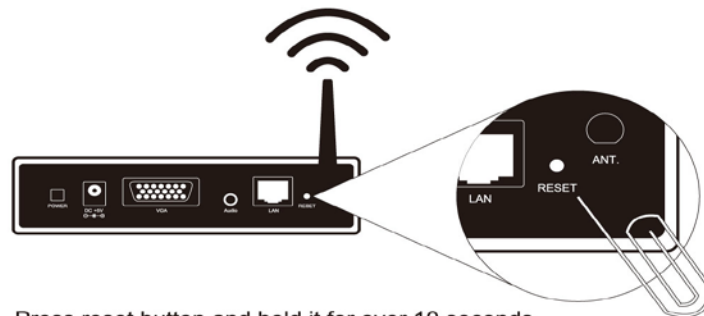

Press reset button and hold it for over 10 seconds.

6.4.7 Firmware Upgrade

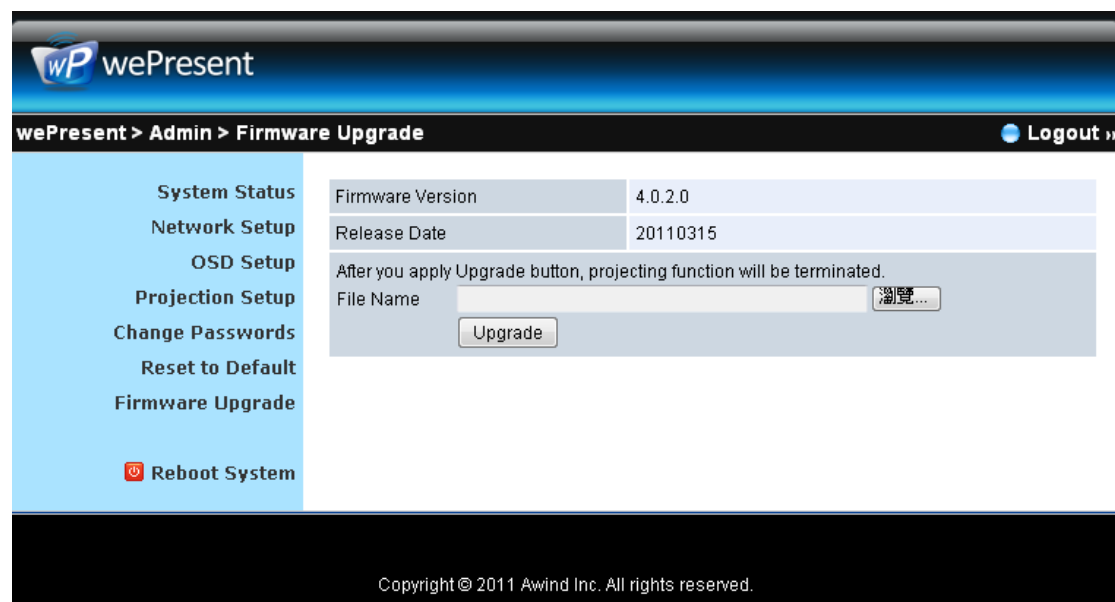

wePresent	
wePresent > Admin > Firmware Upgrade	
Logout »	
System Status	Firmware Version: 4.0.2.0
Network Setup	Release Date: 20110315
OSD Setup	After you apply Upgrade button, projecting function will be terminated.
Projection Setup	File Name: <input type="text"/> <input type="button" value="浏览..."/>
Change Passwords	<input type="button" value="Upgrade"/>
Reset to Default	
Firmware Upgrade	
<input type="button" value="Reboot System"/>	

Copyright © 2011 Awind Inc. All rights reserved.

Click **[Firmware Upgrade]** button to upgrade firmware.

1. Firstly, you have to get latest firmware image file from your vendor.
2. Click **<Browse>** to specify file name you want to upgrade.
3. Click **<Upgrade>** to start.
4. A warning message shown and count down counter on the screen.

5. After a few minutes, a complete message shown on the screen.
6. Restart wePresent box to take effect.



Please wait while System burns new firmware into your device.

Warning: It needs to take 10~15 minutes to burn the file you transferred into flash memory. **During this period, any interrupt such as shut down or reboot the system will cause system crash!!**

Estimated Time remaining: : 890seconds



Warning: Don't power off wePresent while firmware upgrade in progress, otherwise will cause your Box doesn't work and have to return device to your vendor for fixing.


6.4.8 Reboot System



Click **[Reboot System]** button, to restart system

- ◆ **<Reboot>**: reboot system automatically.

6.4.9 Logout

 **wePresent**

wePresent > Admin > System Status

[Logout »](#)

System Status

Network Setup


OSD Setup

Projection Setup

Change Passwords

Reset to Default

Firmware Upgrade

 Reboot System

Model Name	wePresent
Versions	
Firmware Version	4.0.0.7
Network Status	
IP Address	192.168.168.206
Subnet Mask	255.255.255.0
Default Gateway	192.168.168.251
Wireless MAC Address	00:07:CB:F8:CB:E4
Wire MAC Address	00:12:5F:00:84:37
Connection Status	
Projecting Status	Projecting
Total Users	1

Copyright © 2010 Awind Inc. All rights reserved.


7. Appendix

Screen Image Background Maker


Quick Installation Guide

Version: 1.00


- 1) Run the "Screen Image Background Maker" and follows the wizard to convert the image file.

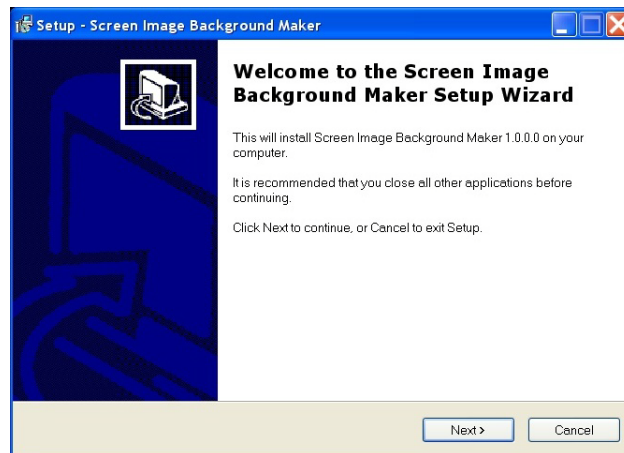


- 2) Press "Open" to select a file to convert this image for background use.

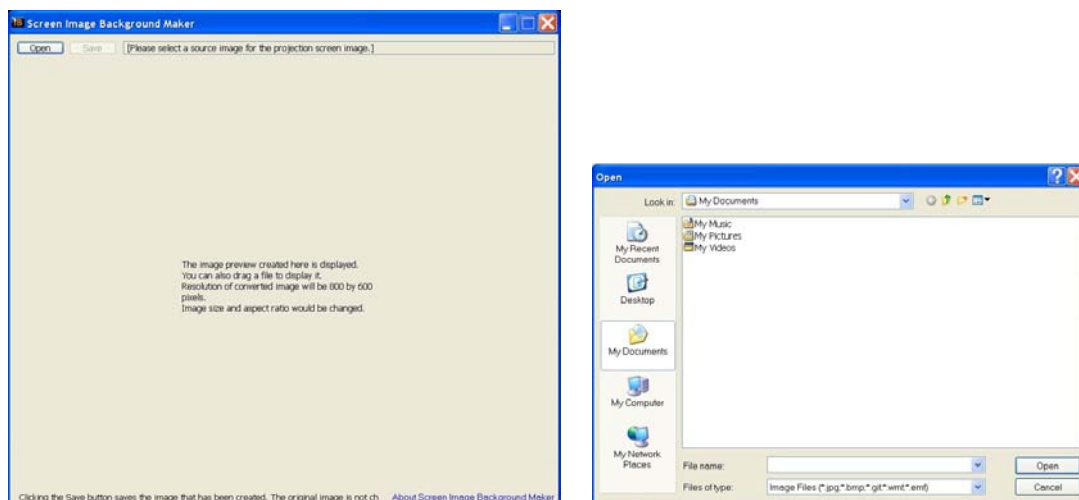



- 3) Press "Saver" to save this file.(*.ib)

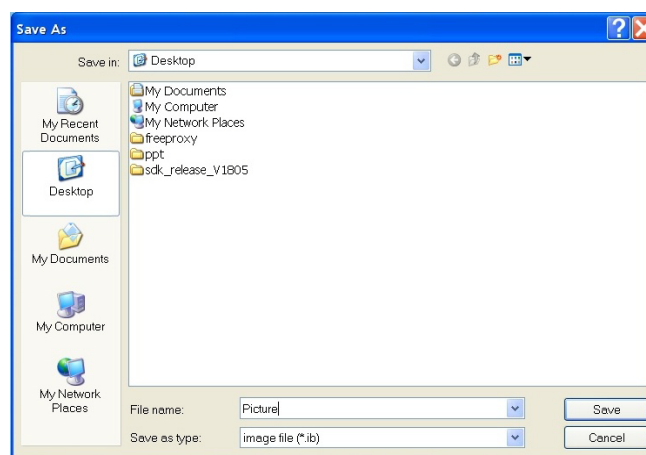


- 4) Please connect to wePresent webpage, and then connect to OSD setup page.

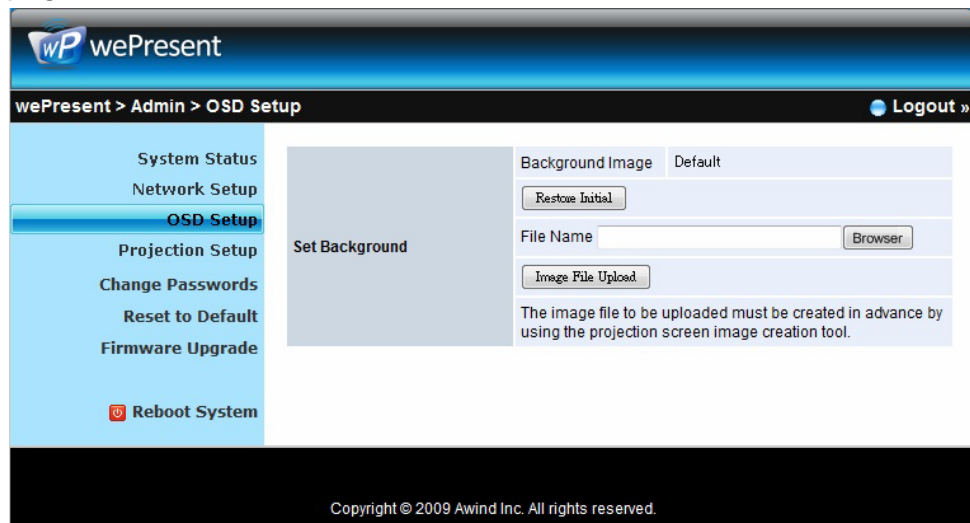

- 5) Press "Browser" to choose the *.ib file.

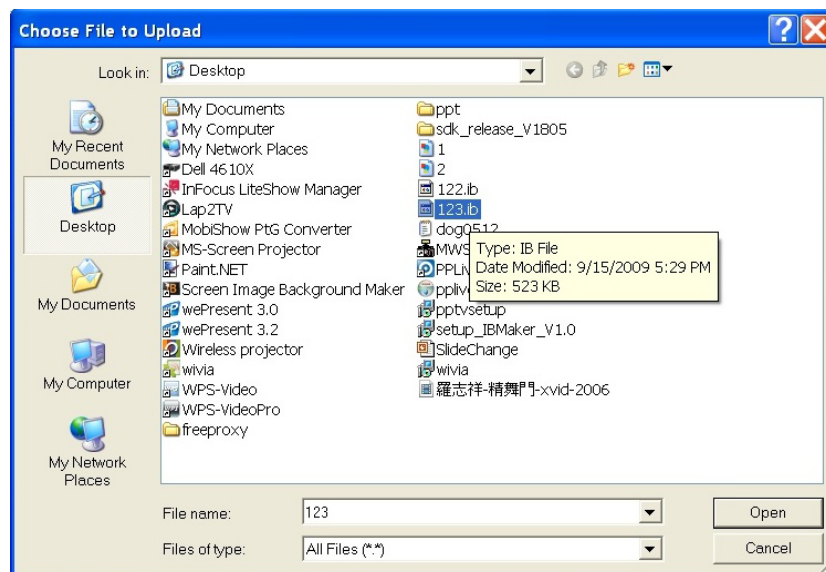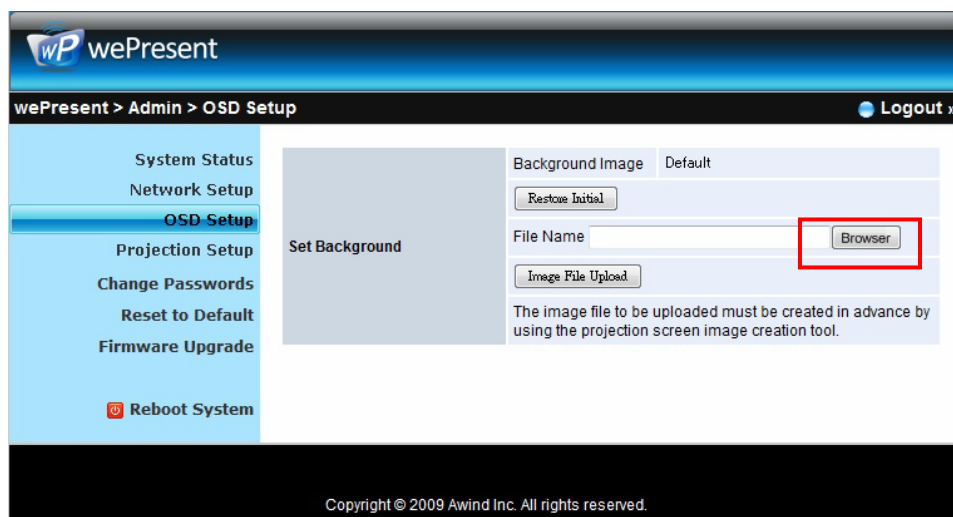

- 6) Press “image file upload” to upload your background image.
Then it will show the message as below.

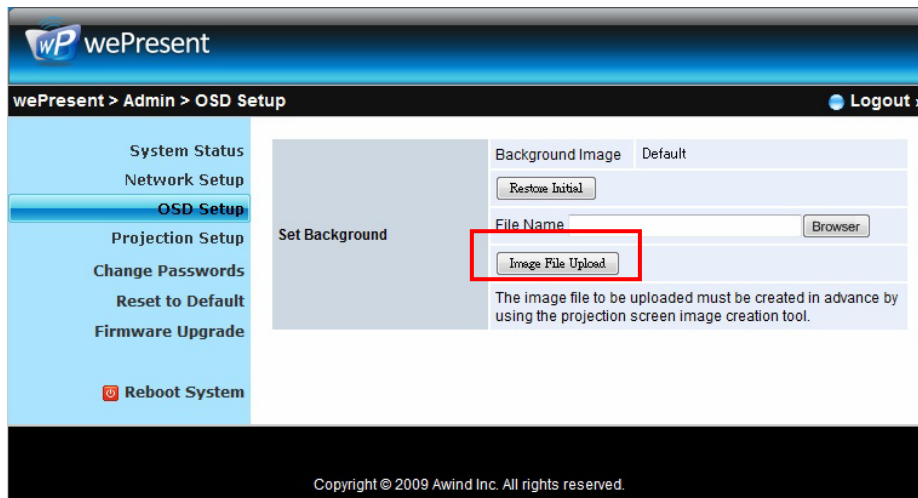

Note: You may find “Screen Image Background Maker” in the USB Token.

PtG Converter


Quick Installation Guide




Version: 1.00

Using PtG Converter

Open “**MobiShow PtG Converter**” in “**MobiShow\MobiShow PtG Converter**” folder from “**Programs**” in the Start menu. The following control panel is displayed on your Desktop when it is launched.




Click the “ **Convert**” button to select a PowerPoint PPT file and start conversion. PtG Converter will open the PowerPoint file and convert it to PtG format. You can see the conversion process on your Desktop.




Click the “ **Preview**” button to expand or collapse the preview pane. Click “ **Play**” to playback selected PtG file, or click “ **Open**” to select a PtG file.

Using PtG Converter

Open “**MobiShow PtG Converter**” in “**MobiShow\MobiShow PtG Converter**” folder from “**Programs**” in the Start menu. The following control panel is displayed on your Desktop when it is launched.



Click the “ **Convert**” button to select a PowerPoint PPT file and start conversion. PtG Converter will open the PowerPoint file and convert it to PtG format. You can see the conversion process on your Desktop.

Click the “ **Preview**” button to expand or collapse the preview pane. Click “ **Play**” to playback selected PtG file, or click “ **Open**” to select a PtG file.